

## NOTES



For further information,  
contact the nearest RBA Group office:  
SYDNEY • MELBOURNE • BRISBANE  
Phone: 1300 788 778 • Fax: 1300 788 878  
info@rba.com.au • www.rba.com.au



## INSTALLATION INSTRUCTIONS

### MODEL A8834-FM FRONT MOUNT WALL HUNG PAN



## COMPONENTS

"P" Trap Stainless Steel Pan      Fixing Bracket  
Security bit

## PRE-INSTALLATION

Installation should be in accordance with local authority and statutory requirements, and as per these installation instructions.

As the pan is designed to be wall hung, care should be taken to ensure that the wall structure is sufficient to support the pan and user. Preferably a masonry wall or similar.

Flushing device should be –  
Fowler Tasman Mk 2 cistern  
Geberit Compact model no. 110.707.PN.1

## INSTALLATION

- 1) If not pre-formed, make sufficient penetrations through the wall, as determined from the drawing, to allow the 100 mm waste pipe and 50 mm flush pipe to pass through.
- 2) Remove the mounting frame from the pan and fix it to the wall with appropriate wall anchors, supplied by others.
- 3) Fit a 100 mm pan collar to the outlet with sufficient 100 mm pipe to extend through the wall. (Alternately the waste and flush pipes may be pre-plumbed and the pan pushed onto the pipework.)
- 4) Similarly fit a 50 mm keeseal to the pan inlet with sufficient pipe, as provided by the cistern manufacturer, to extend through the wall.
- 5) Push the pan over the mounting frame, and secure to the pan to the frame with the security screws provided.
- 6) Make the necessary connections to the waste, and install the cistern and connect according to the manufacturers instructions.
- 7) Check for leaks and correct flush volumes, 6 litres full flush and 3 litres half flush.

## INSTALLATION

- 1) 55mm I.D. Flushing Inlet. Keeseal By Others.
- 2) 100mm O.D. Waste Outlet.
- 3) Wall Anchors And Anchoring Hardware Are By Others.
- 4) Mounting Channel With 13mm Diameter x 22mm Long, Wall Mounting Slots.
- 5) Vandal Resistant Fasteners.

