



rba

INSTALLATION INSTRUCTIONS

MODEL RBA9999-39 FRONT FIXED SECURITY SHOWER PANEL



For further information,
contact the nearest RBA Group office:
SYDNEY • MELBOURNE • BRISBANE
Phone: 1300 788 778 • Fax: 1300 788 878
info@rba.com.au • www.rba.com.au

II/Model RBA9999-39/0908

DESCRIPTION

RBA9999-39 is a vandal resistant shower panel complete with H & C recess cocks for user adjustable temperature control, and a self closing pneumatic push button activated valve. Closing time is adjusted at time of installation. It can be used for new installations, or converting existing uncontrolled showers to timed self closing, retaining the ability of the user to adjust the temperature.



Shower Rose supplied to be mounted separately

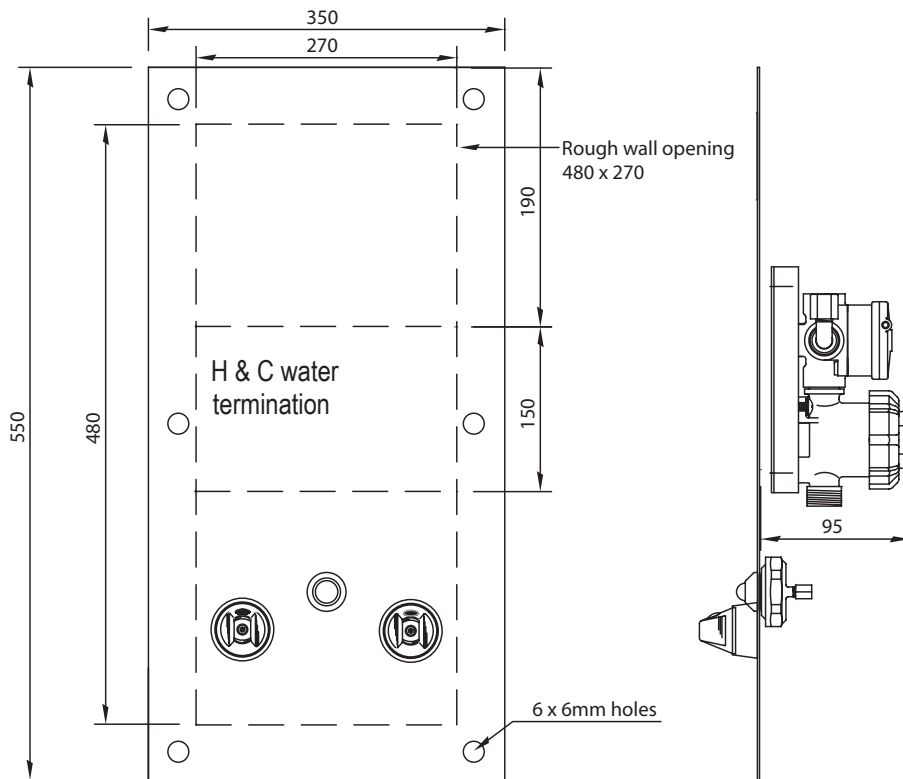


FIG 1

COMPONENTS

COMPONENTS PROVIDED:

3mm S/S panel
Single temperature Air Control Valve
Pneumatic push button
(2) Vandal resistant recess cocks
Vandal resistant shower rose

PROVIDED BY OTHERS:

Wall fixings
Braided S/S flexible hose connections
Pipe & fittings
(2) Mini cocks

INSTALLATION

1. A rough wall opening of 480 x 270 and 95 deep, as shown in FIG 1, should be prepared, and existing recess cocks (where applicable) removed.
2. Both hot and cold water should be terminated with mini cocks, in the location shown.
3. Shower riser should be terminated within the rough wall opening with a 1/2" bsp male thread.
4. Wall should be drilled and appropriate wall anchors used.
5. Before connecting panel, supply lines should be flushed free of grit and dirt etc.
6. Connect the panel with flexible s/s braided hoses provided by others, and turn on the supplies.
7. Valve should be activated by pressing the push button, and dirt and grit flushed before connecting the shower rose. Refer to "Air Control valve installation instructions" to adjust the flow time.
8. Once the flow time has been set, check for leaks and secure the panel to the wall with s/s screws.
9. Fit the shower rose.