



• LOADING INSTRUCTIONS •

1. Remove empty roll(s) from bottom of dispenser (see Fig. 1).
2. Take spindle out of empty roll(s).
3. Insert spindle in new toilet tissue roll(s) (see Fig. 2).
4. Place spindle ends in tracks at top of dispenser so that tissue is dispensed from bottom of roll (see Fig. 3). Spare top roll will drop into position for use when lower roll is used up.
5. Close front cover of dispenser and lock.
6. If replacement parts are required, order spindle No. 4288-9 and lock No. 288-42.

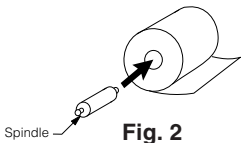

BOBRICK

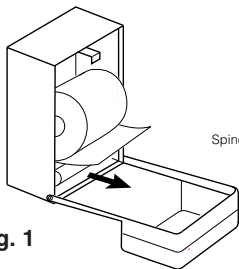