

INSTRUCTIONS FOR INSTALLATION AND MAINTENANCE

Bobrick Models B-822 Series "G" and B-8226 Series "G" Lavatory-Mounted Soap Dispensers

HOW TO MOUNT DISPENSER (see FIGURE A)

1. Make sure countertop surface around mounting hole is clean and free of soap residue. Insert shank through 1" (25mm) diameter hole. *Make sure the rubber washer is in place between the countertop and shank.*
2. Insert pump assembly into shank. Turn shank to lock.
3. Place spring washer and retaining nut against underside of countertop. Tighten retaining nut against underside of countertop.
4. Screw on container cap and soap container.

HOW TO FILL DISPENSER

1. Turn escutcheon counter clockwise slightly until it stops.
2. Insert the longest projection at one end of the BobKey into the rectangular hole of escutcheon (see FIGURE B). Push straight in. While holding BobKey in, turn escutcheon counterclockwise about 1/8 turn.

CAUTION: Do not use BobKey to turn escutcheon.

3. Lift out the entire soap pump assembly.
4. Fill dispenser with liquid or lotion soaps.
5. Replace soap pump assembly, reversing the steps above.
6. Secure the escutcheon by turning clockwise until lock snaps into position.

NOTES:

1. Never use abrasive cleaners.
2. Dispenser may also be filled by removing soap container from beneath countertop.
3. If a shorter shank is desired, remove soap pump assembly, then cut shank at break in threads.
4. For proper maintenance, the soap pump assembly should be flushed every six months by pumping warm water through it.

CAUTION: Do not over tighten retaining nut.

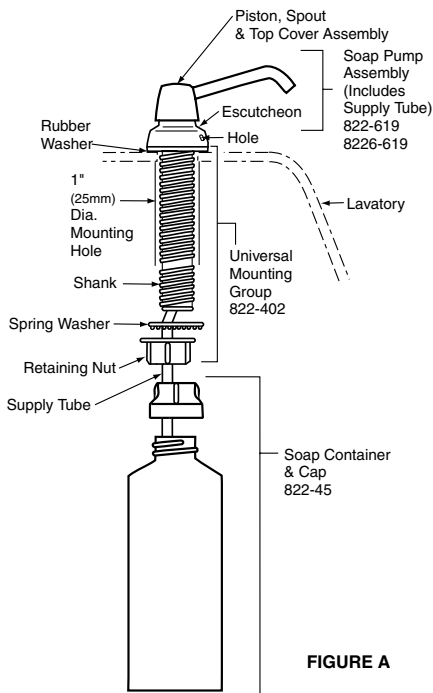


FIGURE A

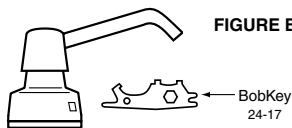


FIGURE B

Designer's Note:

Do not use iodine-based surgical soaps, or alcohol-based antiseptic solutions in this unit; soap valve is not designed to dispense these types of corrosive soaps.

REPLACEMENT PARTS LIST

822-619	Soap Pump Assembly – 4-inch Spout
8226-619	Soap Pump Assembly – 6-inch Spout
822-402	Universal Mounting Group
822-45	Soap Container & Cap
24-17	BobKey
822-94	Container Cap
822-95	Soap Container



In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.

200 Commerce Drive, Clifton Park, New York 12065-1350 • Tel: (518) 877-7444 • FAX: 518-877-5029
11611 Hart Street, North Hollywood, California 91605-5882 • Tel: (818) 982-9600 • FAX: 818-503-1102
100 Bobrick Drive, Jackson, Tennessee 38301-5625 • Tel: (731) 424-7000 • FAX: 731-424-7800

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY

45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Tel: (416) 298-1611 • FAX: 416-298-6351